# SONNEMAN

## This light should be installed by a licensed electrician.

#### LAMP INSTALLATION AND ASSEMBLY

- 1. Shut off power to the outlet box.
- 2. Attach the universal mounting plate to the outlet box using outlet box screws. (Fig. A)
- 3. Determine the height which the fixture is to be hung.
  Screw together stems as needed to achieve desired length. (Fig. B)
- 4. Make appropriate electrical connections using wire nuts. If there is no green ground wire from the outlet box, then connect the fixture wire to the mounting plate with the green screw provided. Place connections in outlet box.
- 5. Attach conopy over outlet box with canopy nuts.
- 6. Install GU10 bulbs by unscrewing the socket cup. (Fig. C)
- 7. Place the four plastic cushions on the four holes in the glass. Secure the glass shade by tightening the set screw in the shade holder against the plastic cushion. (Fig. D)
- 8. Install the shade assembly by inserting the cable terminals into the terminal hub. (Fig. E)
- 9. The cable lengths can be shortened if necessary by adjusting the position of the cable terminals.
- 10. Restore power to fixture.


#### IMPORTANT SAFETY INSTRUCTIONS Lighted lamp is HOT!


- 1. Disconnect and allow to cool for at least 5 minutes before replacing bulb.
- 2. Bulb gets HOT quickly! Be sure power is off when re-lamping.
- 3. Do not touch hot enclosure.
- 4. Do not direct light at persons.
- 5. Do not look directly at lighted bulb.
- 6. Keep lamp away from curtains, draperies, and similiar materials.
- 7. Use only a 120v, 50watt, GU10 base, MR16 halogen bulb.
- 8. Do not touch bulb at any time.


Use a soft cloth to clean. Oil from skin may damage bulb integrity.

9. Do not operate the lamp with damaged or missing shield.

### Assembly Instructions for: Item 3401 Handkerchief series small square pendant

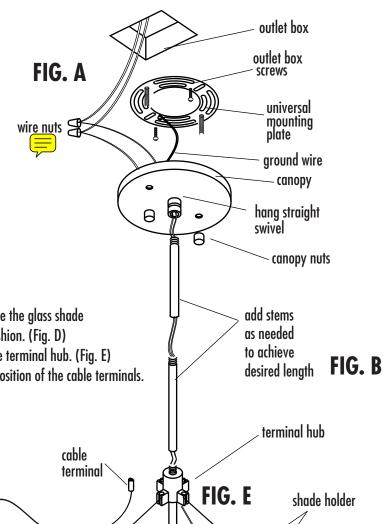

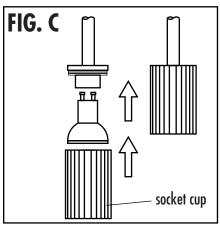

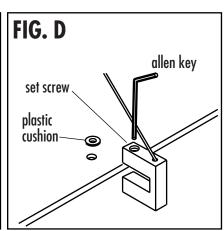

shade