

LED Product Information and Warnings

Important

- Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance.
- Consult a qualified, licensed electrician to ensure correct branch circuit conductor.
- Please read all included assembly instructions and warnings carefully before installation. Contact
 Customer Service if you have any questions or concerns. Before installation, please confirm that the fixture
 is compatible with your supply voltage and dimming system, if present.
- LEDs are highly sensitive electronic devices, and must be treated with care. Do not open any factory sealed compartments, and avoid touching the LEDs with your hands or any object.
- Although all our fixtures are equipped with protective devices, LED fixtures are vulnerable to power surges
 and supply variations. Do not install LED fixtures on the same circuit as any motors, appliances, or HVAC
 systems.
- Do not remove or bypass any LED Driver or Transformer that is provided with the fixture, and do not replace or substitute with another power supply.
- Remote LED Driver or Transformer installation must be done by a licensed electrician and in accordance with local codes. Remote installations should be in an accessible location, as close to the fixture as possible.
- Fixtures must be wired in parallel on independent leads; do not "daisy chain" multiple fixtures together or wire them in series.
- All factory-made splices and connections must remain intact. LED circuits are carefully designed and built, and improper connections may damage the fixture.
- The ends of coaxial pendant cords have been precisely stripped and split at the factory and must not be field cut. Excess cord or cable should be neatly coiled and reserved in the fixture canopy.
- Any mounting hardware is provided for your convenience and should be used with discretion. Always use the appropriate hardware for the mounting surface.

1 of 2

SONNEMAN®

Assembly Instructions

INSTRUCTIONS D'INSTALLATION


Torus Series - 24" LED Pendant, 32" LED Pendant

2870, 2872

Important

- Always disconnect the power before installing or replacing bulbs and before cleaning or other maintenance.
- Consult a qualified, licensed electrician to ensure correct branch circuit conductor.
 Consulter un électricien qualifié pour vous assurer que les conducteurs de la dérivation sont adéquats.
- 1. Shut off power to the outlet box (A).
- 2. Determine the height at which the fixture (B) is to be hung. Adjust the steel cables (C) to the desired height. To shorten the cable, push the cable up and it will be locked automatically. To lengthen the cable, lift up on the cable and push up on the lock (D). While keeping the lock depressed, lower the cable to the desired length. Release the lock to set.
- 3. Use the screwdriver to loosen the set screw (E). Adjust the power cord (F) to the desired length. Tighten the set screw to set. Reserve extra cord in the canopy (G).
- 5. Attach the mounting plate (H) to the outlet box (A), secure with outlet box screws (J).
- 6. Make appropriate electrical connections using wire nuts:
 - a. Connect the LED driver's (K) live wire (black) to the live outlet box wire.
 - b. Connect the LED driver's neutral wire (white) to the neutral outlet box wire.
 - c. Connect the fixture's ground wire (green or uncoated) to the ground outlet box wire. If no ground is present in outlet box, connect canopy's ground wire to the mounting plate (H) using the green screw (included).
 - d. Carefully place connections and LED driver in the canopy (G).
- 7. Secure canopy (G) with two screws (M).
- 8. Adjust steel cables (C) or power cord (F) as necessary to level the fixture (B).
- 9. Restore power to the outlet box (A).



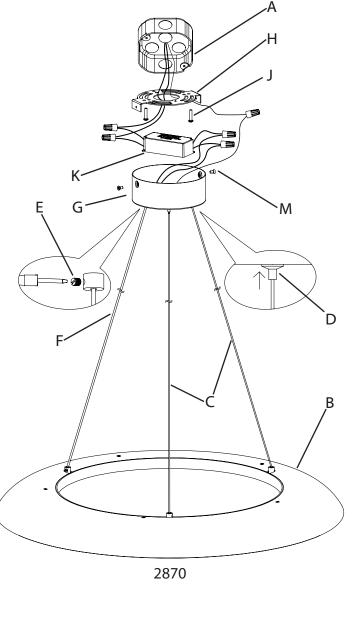

Note

 This fixture is dimmable with Electronic Low Voltage (Trailing-Edge), Incandescent (Leading-Edge), and 0-10V type dimmers only.

Care Instructions

- Dusting: Use a clean, dry cloth.
- Cleaning: To protect the finish, avoid any harsh abrasives or chemicals.